



Hanging instructions

This is how you do it

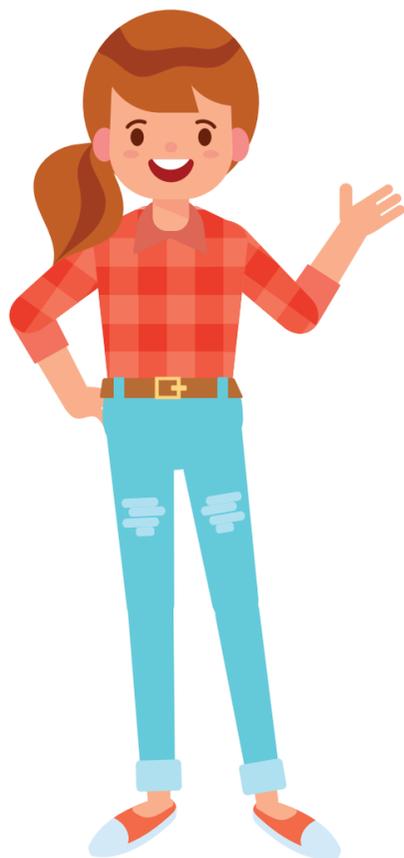

Watch Julia as she hangs her wallpaper and follow her instructions: you'll be amazed by the result!

To download the instructions, visit www.bnwalls.com

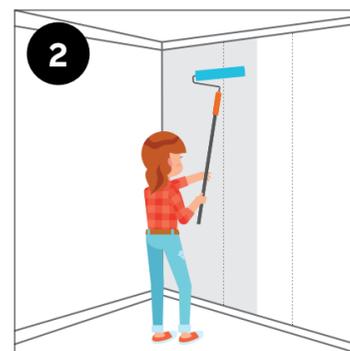

Apply glue to the wall with a roller and apply the first strip to the wall. Start from the top left and make sure that the first strip is straight, using a spirit level or a pencil attached to a piece of string. Is it nice and straight? Make sure to align the next strip carefully!



Using a wallpapering tool, gently smooth out any bubbles. Apply adhesive to the wall to prepare it for the next strip. Carefully align it with the first strip, making sure there are no visible seams.


Before you get started

Make sure the wall is smooth, clean, dry and evenly coloured. Smoothen the surface where necessary and remove any paint, remaining wallpaper, nails and the like. Check your new wallpaper for defects and only use bolts from the same production run. Assess the result after applying the first three strips, as complaints* based on more than three strips will not be accepted.


*In case of a complaint, please include the label and a sample.

Ready-to-use PVC adhesive by BN Walls

Use an adhesive for a heavy, high-quality vinyl wallpaper. We recommend using ready-to-use PVC adhesive by BN Walls. Ask your salesperson for advice if necessary.

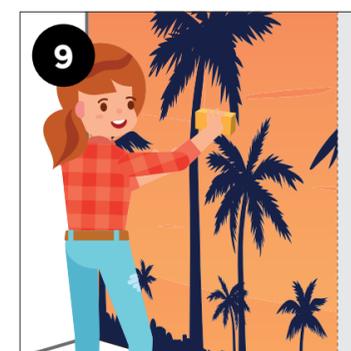

Gently smooth out every strip. Work from top to bottom and from the middle to the sides. Remove any adhesive stains immediately, using clean water and a sponge.

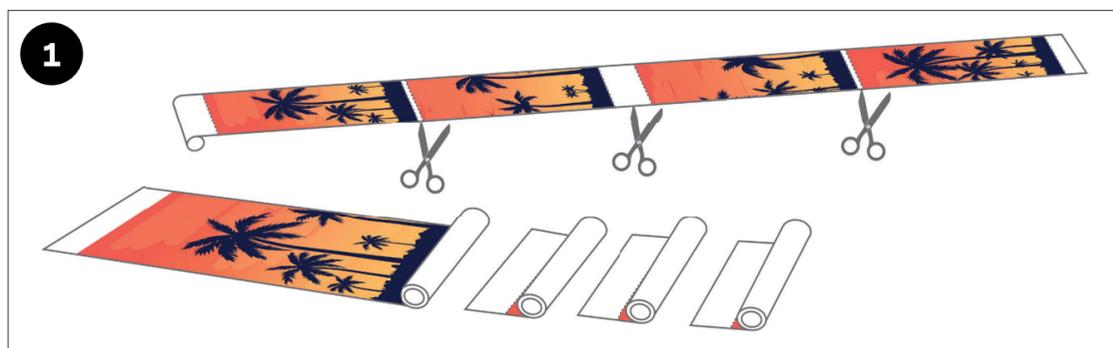

First, cut all strips to the appropriate length, leaving an excess of approximately 5cm more than the height of the wall. When using wallpaper with a design, pay attention to the pattern.



Once you're happy with all your strips, cut off the top and bottom excess, using the skirting board or a steel ruler. Use a sharp blade to prevent the wallpaper from fraying or tearing. Voilà!